

SENTRONIC XXL

ZERO SPEED CONTROLLER

- ➔ Control of trial or single phases engines
- ➔ Control of engine with $Y\Delta$ starting
- ➔ Detection of line breaks
- ➔ No adjustment / 100% automatic
- ➔ 3 NO lines + 1 NC line 8A/250V
- ➔ Interlocking control
- ➔ **Dip-switch** to adjust the reset mode
- ➔ **LED** indicating the functioning state
- ➔ Power supply : 24Vac or 85~265Vac

SAFETY CATEGORY

SENTRONIC XXL : category 4 according to EN 954-1
 Starting $Y\Delta$: category 3 according to EN 954-1


8A/250V
8A/50Vdc

AUTO ADAPTATION

PLUG IN TERMINALS




wiring diagram

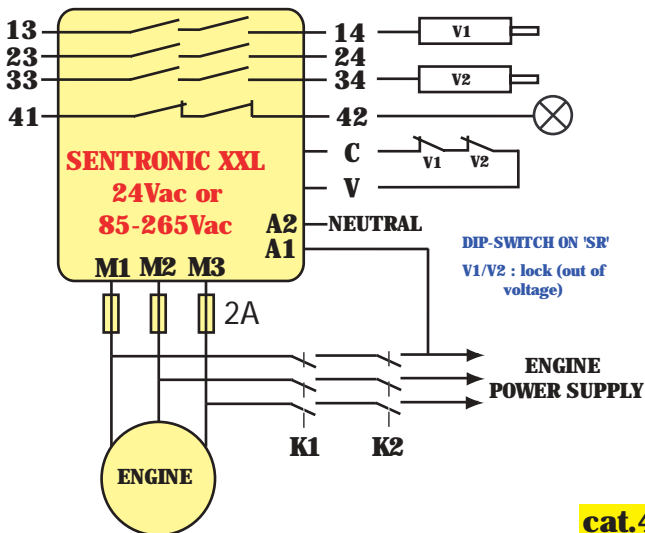

cat.4

DIMENSIONS

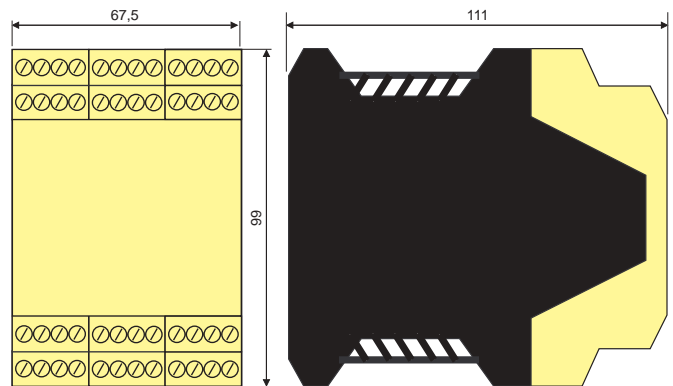

FUNCTIONING

Connected to the engines coils, the Sentronic XXL detects the presence (or not) of the voltage induced .

Advice

With the Sentronic, you can be sure that when you open the door, all movements have stopped.