




## Mounting instructions MMS-A/P

### Instructions

1. Place 2 sliding blocks M6 in the groove of the mounting column to the desired position. Then fix the mounting plate B with M6 screws.
2. Place 2 sliding blocks M5 in the groove of the Alu-profile C (The sliding blocks should cover the mounting holes of the mounting plate). Then fix the profile C to the mounting plate.
3. Fix the Mounting devices E with sliding blocks M5 and M5x8 screws on the Profile C. Mount on this devices the round rods A for attachment of the light barrier or the reflector mounting device.
4. Snap the Caps D on the Profile C.
5. Attach the Sensors (Reflectors for MMS-P-1000).
6. After the final alignment tighten all screws.

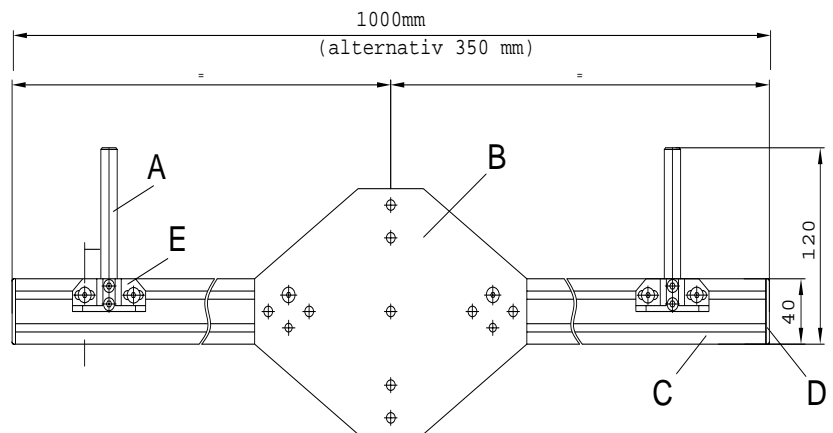

- A = V2A-round rod 12x100mm
- B = Mounting plate
- C = Alu profile
- D = Cap
- E = Mounting device UMS 1.03

In order to achieve best results for the adjustment take the instruction manual of the used sensors also into consideration.